PZEM-061 With Split CT Single Phase 80-260V 100A 4in1 Digital Energy Meter LCD Display Panel Voltmeter



Product Type	PZEM-061
Current Range	0-100A(with split CT)
Voltage Range	AC 80-260V
Function	 Measure voltage, current, active power, energy, frequency, power factor Overload alarm Power alarm threshold preset Reset energy Store data when power off. Large-screen LCD Backlight function.

Functioan Specification MULTIPLE PRODUCT FUNCTIONS



4 Parameter Measurement



Overload Alarm



Power Alarm Threshold Pre





Large-screen LCD Display

DISPLAY INTERFACE

PZEM-061

VOLTAGE

CURRENT

Test range: 80~260V

Display format: 80~260V

Test range: 0~100A

Display format: 0.00~99.99



POWER

Test range: 0~22kW

Within 1kW, display 0.0~999.9W;

Within 1kW~10kW, display 1000~9999W;


10kW and above, display 0.1~22.0kW


ENERGY

Test range: 0~9999kWh

Within 10KWh, display 0~9999W

10kWh and above display10~999

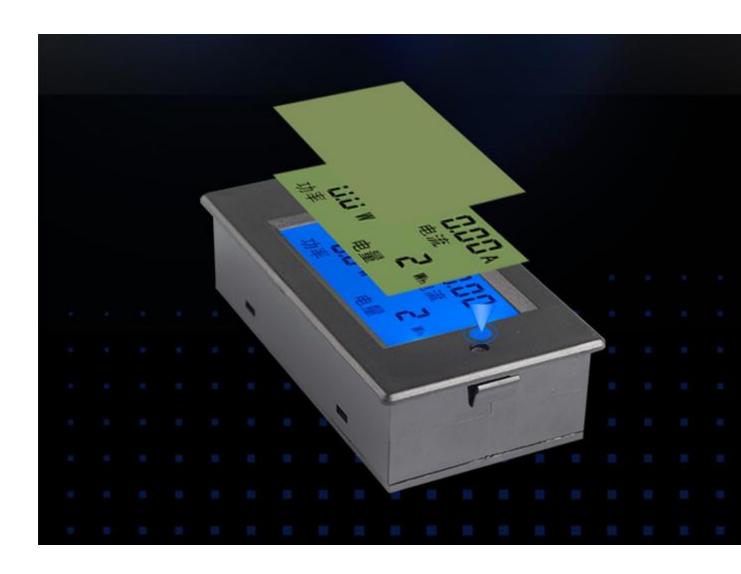

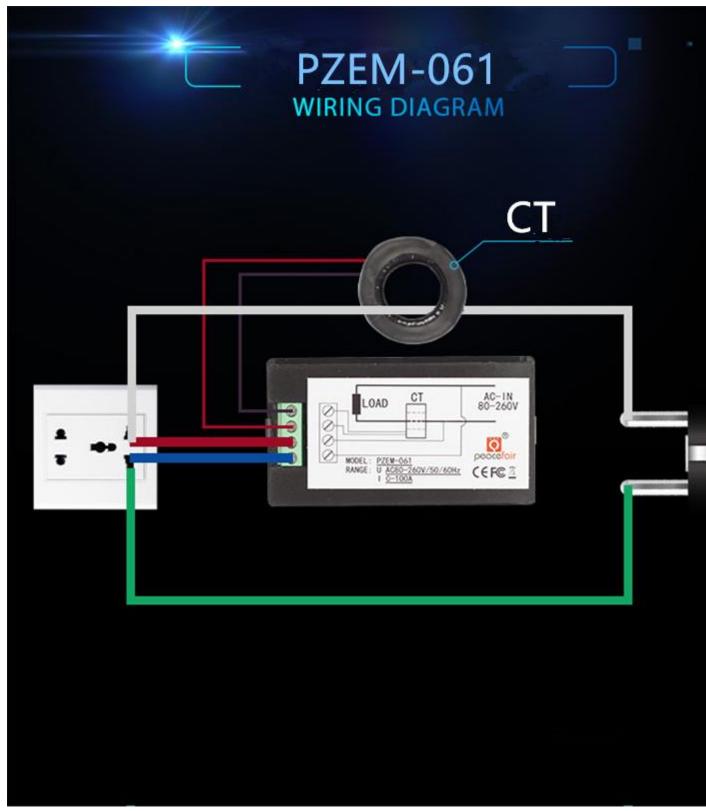

How to reset the energy data

Step1: Long press the key for 5 seconds until the number in energy display window flash, then release the key. Step2: Short press the key again, then the energy value is cleared and exit the reset flashing state. If you don't want to clear, then long press the key for 5 seconds until the number doesn't flash, it means the energy value is not

cleared and will exit the reset state.

How to Set power alarm threshold

Step1: Long press the key until the LCD screen display "SET CLr", then release the key to enter the setting state Step2: Power window display the current power alarm value and the last digit begin to flash, then you can short press to plus 1, when there is no operating over 3 seconds, it will switch the digit position automatically, the setting method is as same as the above.

Step3: After finish the setting, long press the key over 5 seconds will store automatically and exit, the range of active power threshold is $0.0 \sim 22 \text{kW}$

Size Information

